JTFUSION™

INSTALLATION INSTRUCTIONS

MADE IN BRITAIN

25 YEAR GUARANTEE

bsi ISO 9001 Quality Management Systems CERTIFIED FM 598327

bsi ISO 14001 Environmental Management CERTIFIED EMS 717559

The following installation instructions are for a 45mm JT Fusion™ shower tray, including:

- Raised and Flat to floor installation
- 45mm Easy Fit Leg Set.

WE RECOMMEND THAT YOU USE



JTFLEXI-FIX



JT90mm WASTE

Check List

PLEASE NOTE: These procedures should be carried out before installation.

1. Check enclosure dimensions are compatible with the shower tray.
2. Check for any transit damage or product defects.
3. Fitting the product is acceptance of quality. All guarantees are void unless these instructions are followed.

Steam Cabins

When installing in conjunction with a steam unit, ensure the steam outlet is at a minimum height of 300mm from the top of the tray.

IMPORTANT:

- **Shower tray side with waste outlet MUST be located beneath shower head.**
- **If plumbing installation doesn't allow the right waste location proceed with raised installation.**

Maintenance

As good as new finish can be maintained by following these simple instructions:

1. Dry out the tray fully after every use, to avoid build up of limescale and soap residue.
2. Clean the shower tray regularly using a damp cloth or sponge. Dry with a soft dry cloth.
3. Occasionally use a non-abrasive cleaner to remove stubborn stains.

Just Trays Ltd
Whitehall Park
Whitehall Road
Leeds
LS12 5XX

just-trays.com

Tel: +44 (0)113 201 5090
Fax: +44 (0)113 201 5099
Email: info@just-trays.co.uk

Shower Tray Customer 25 Year Guarantee


Just Trays Ltd guarantees all JTFusion™ shower trays against faulty materials or manufacture for a period of 25 years from date of installation, provided that it has been installed, usedand maintained in accordance with the manufacturers instructions. If in our opinion the product fails under those circumstances, Just Trays Ltd will undertake to repair or replace the product at our option. Should a claim arise, we request that the following conditions be satisfied. 1. Proof of purchase at the time of claim. 2. The product has been fitted/installed in accordance with our fixing instructions, local by laws and general good plumbing practice. 3. The product has been maintained and cared for in accordance with our instructions. If in our opinion the product has been modified, misused, neglected, wilfully or accidentally damaged, we can accept no responsibility for failure. 4. Just Trays Ltd must be given the opportunity to inspect the product in the installed condition. Should Just Trays Ltd carry out work as a result of a claim but subsequently it is revealed that the product has been abused or improperly installed, we reserve the right to charge the customer for all expenses incurred. The liability of Just Trays Ltd is limited to the product supplied by Just Trays Ltd, and does not extend to consequential loss or damage arising from the defective product. All aftersales enquiries must be directed to the stockist where the product was purchased. Just Trays Ltd believes in continuous improvement. If in our opinion the product has failed under the terms of the guarantee and a replacement is offered but identical goods are no longer available, Just Trays Ltd will replace it with our nearest equivalent product. This guarantee, which is effective for products purchased after September 2009, states our entire liability and is offered to customers acquiring our products as consumers, not in the course of trade or business. This guarantee does not affect your statutory rights. This guarantee is only applicable in the UK and Republic of Ireland.


Riser Kit Contents*

Panel Kit Number	Legs	Panel Support	Large Circular Pad	Small Circular Pad	Floor Clips	Panels
						
1	6	4	6	4	6	1
2	8	5	8	5	7	1
3	8	5	8	5	7	2
6	10	6	10	6	7	2

*Riser kits must be purchased separately.

Fitting Options

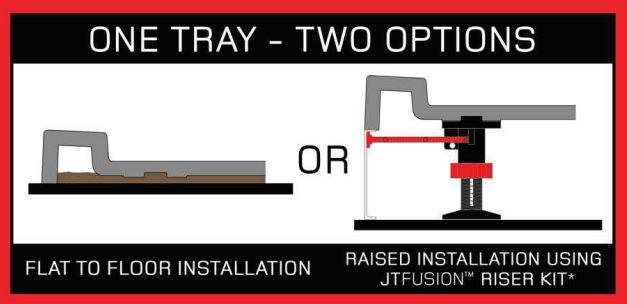

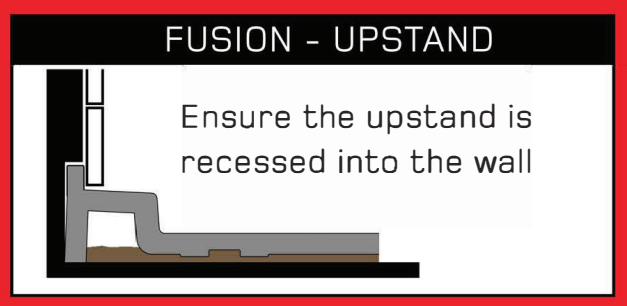

14-01-2026

RAISED INSTALLATION

Preparation
1. Scribe 2. Prepare


1. Place the tray in situ. Scribe a pencil line around the tray as shown.




2. Turn the tray over on a soft dust sheet & check:

- Tray diagram below is appropriate to your installation
- Leg assemblies: A, B, C
- Clean legs & back of tray first to remove dust and residue, then fit and hold leg for 30 seconds until secure
- Positions of panel supports & required panel positions

Leg assemblies

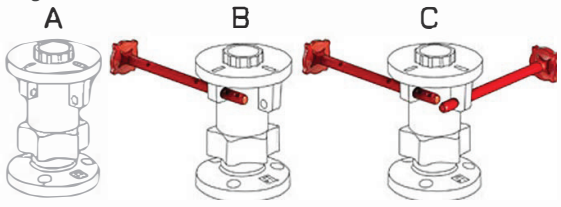


Rule: Panel supports should be used on open edges and to support panels only. When waste is against a wall, leg C should be used in the open corner as shown below.

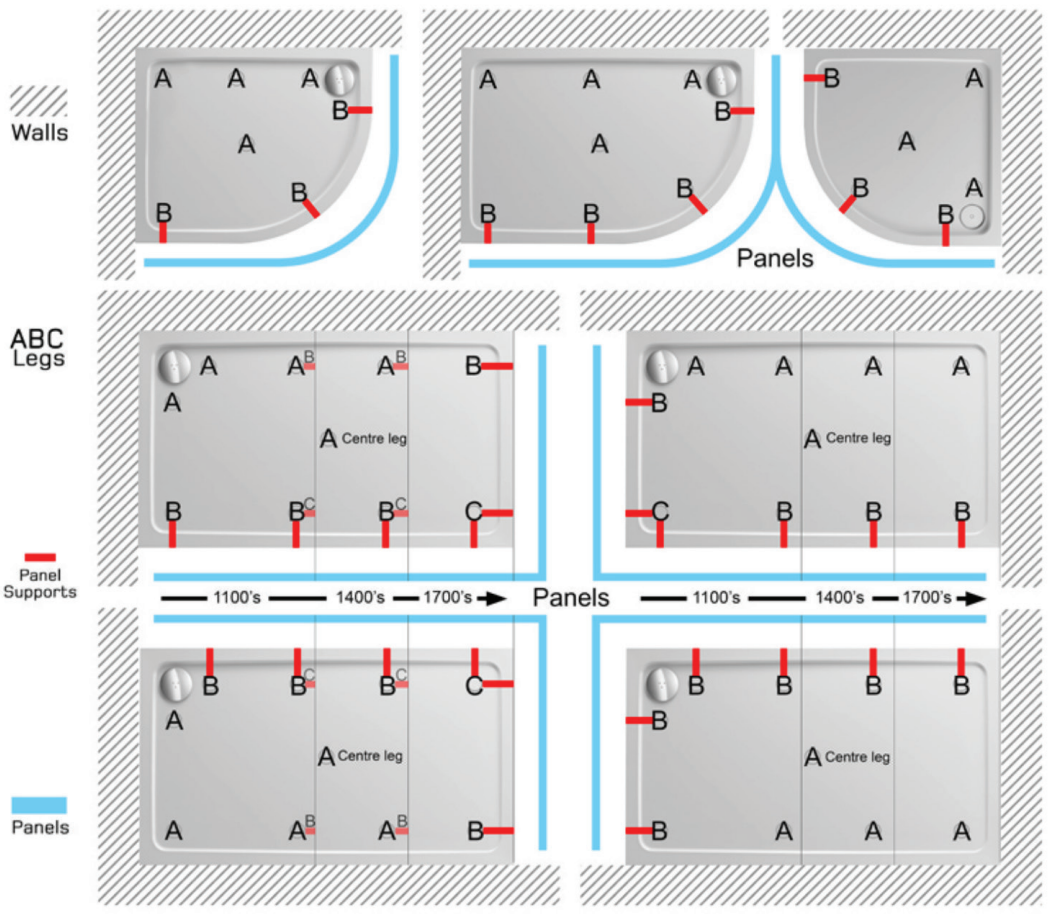

Fitting
3. Assembly + Leg Fitting

3. Clean legs and back of tray before applying the large circular pads to all leg bayonet fittings. Following diagrams A to D below, fix all the legs to the built-in leg fixing locations. Use step 2 diagrams for reference.


A. Align panel supports 90° to outside wall

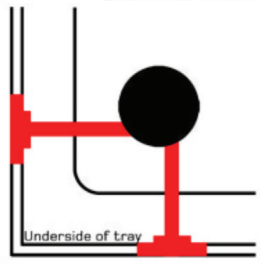

B. Fit the clean legs with circular pads onto the clean tray designated locations and hold for 30 seconds



C. Adjust

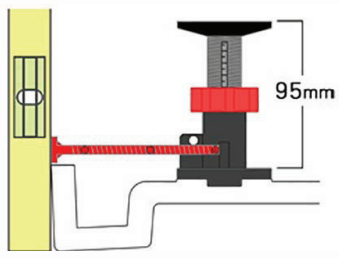


D. Level



Finishing
4. Screw down all floor clips as shown below, 5. Level 6. Fix 7. Panels 8. Seal


4. Screw down all floor clips as shown below, then refer to step A of the waste instructions.

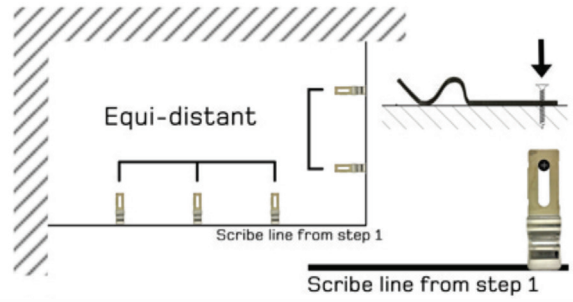

5. Turn the tray over and peel the protective film from the outer edges and waste only. Place the tray in situ and level both ways. Do not slide into position, lift and place vertically.




6. Refer to step B of the waste instructions. Fix all legs to the floor, screw fix legs where possible. Fix the centre leg last to form a stabalising point.

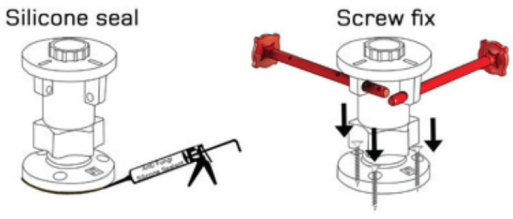

7. Panels - Retain the return rebated ends (circled). Follow steps A to C below to fit the panels.

A. Mark and cut




B. Apply the small pads



C. Fit to tray



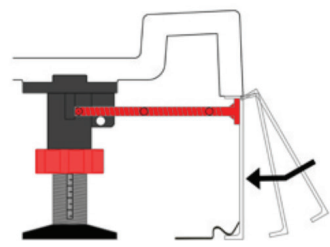

8. To complete the installation, tile and seal all joints by following steps 7 and 8 of the FLAT TO FLOOR 'Finishing' section below.

The following items, which are not provided, are also required to complete the installation: - A soft dust sheet -10mm marine plywood - Sand and cement - Anti-fungal silicone sealant

FLAT TO FLOOR INSTALLATION

Preparation
1. Clean 2. Base 3. Film


1. Prepare area by clearing all debris and levelling off.



2. Prepare a rigid base of 10mm thick Marine Plywood. Cut a hole to accomodate the waste and fix to floor.




3. Remove protective film from wall sides and waste only. Refer to step A of the waste instructions.

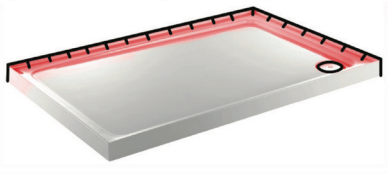


Fitting
4. Base 5. Fit and Level

4. Cover the base with a 15mm thick 5:1 ratio Sand:Cement mix.

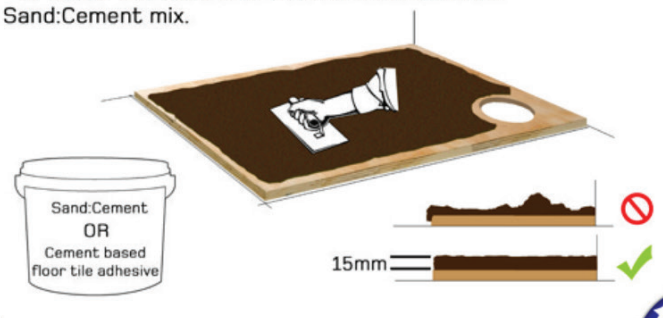

5. Carefully lower the tray onto the prepared base. Gently press on the tray to force it into position and level off. Ensure tray is completely level.

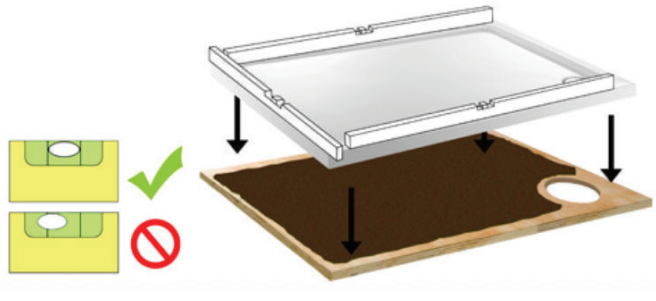

Finishing
6. Waste 7. Tile 8. Seal

IMPORTANT:
Allow tray to fully set for 24 hours before proceeding

6. Refer to step B of the waste instructions.

7. Protect the tray with a soft dust sheet and commence tiling.

8. Seal all joints and allow to set to complete the installation.

